

VICTORIO®

APPLE PEELER


VKP1010
VKP1011




Instruction Manual

YOUR APPLE PEELER SHOULD INCLUDE THE FOLLOWING, DEPENDING ON THE MODEL.

**VKP1010
(Suction Base)**

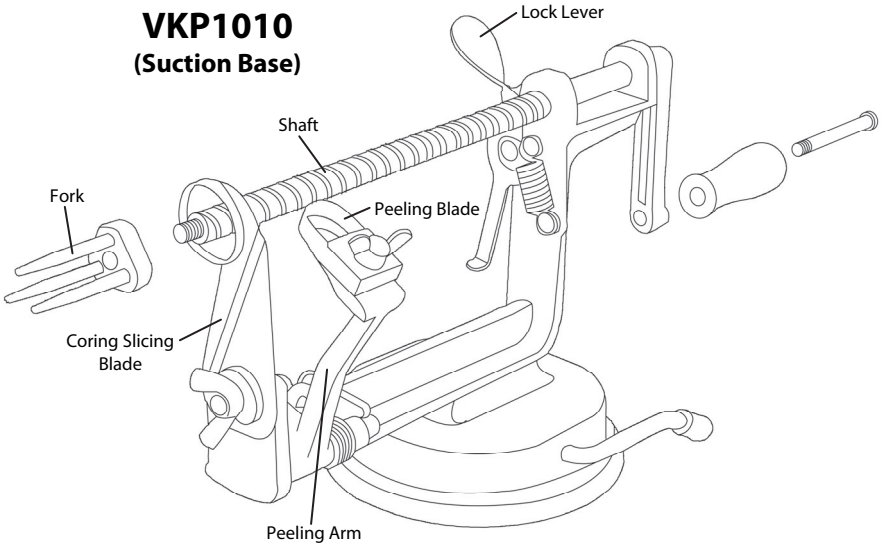

**VKP1011
(Clamp Base)**

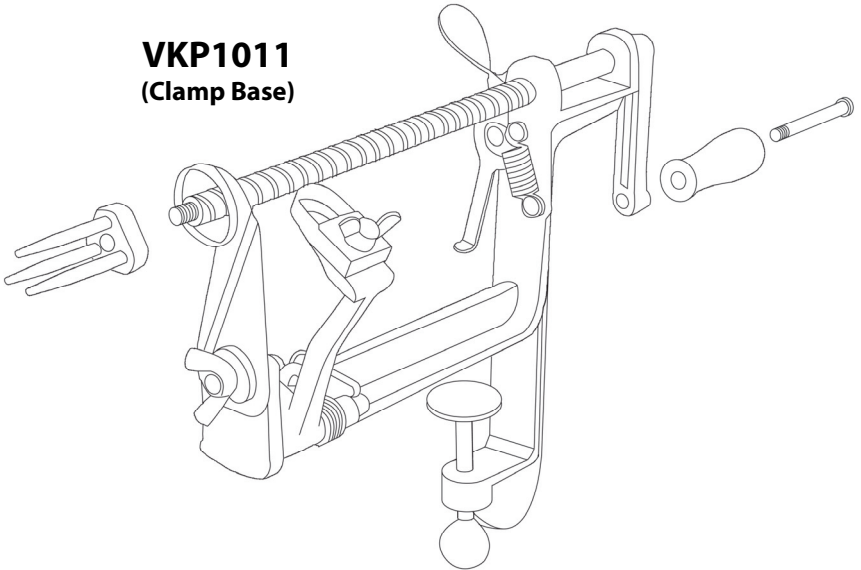

Copyright © 2011 Victorio Kitchen Products. All Rights Reserved.

CONGRATULATIONS!

You now own the world's finest apple/potato peeler. You'll save time, effort and money. We want you to get the most out of your new Victorio Peeler. Before plunging right in and peeling a bushel of apples or bag of potatoes, you will want to get acquainted with the Victorio Peeler. It's designed to save you time, effort and money by performing several tasks at once. With the turn of a hand you can:

- Peel, core, and slice apples
- Peel apples and potatoes
- Slice and core apples without peeling
- Make shoestring potatoes

And the Victorio Peeler always gives you the choice of leaving the peel on or taking it off.

Warning!

- Peeler has sharp blades and edges that can cause serious injury if used or handled improperly.
- Use caution at all times when assembling, adjusting or using this peeler.
- Close supervision is required when using peeler near children.
- For household use only.
- Please read the entire manual before using.

Assembly:

Using the diagram on the left as your guide





1. Using a Phillips screw driver, attach the handle using the included screw.
2. Attach the fork to the end of the threaded rod.

Mounting to suitable surface: (mounting diagrams and info):

Before using the peeler needs to be properly secured to a suitable surface that is secure and will stay firmly in place during use. This is required for the peeler to work properly.

VKP1010 Suction Base Peeler: The suction mount must be used with a smooth non-porous surface. When suction cup is used on the correct mounting surface it will stay firmly in place and allow the peeler to be used without need to reattach. Surfaces that may not be suitable for use are wood, small or rough tile, unsealed granite and textured surfaces or surfaces with cracks.

VKP1011 Clamp Base Peeler: Needs to be attached to a firm sturdy surface. The clamp base will attach to a surface thickness of 1/2-inch to 1-1/2 inches. Clamp should only be tightened by hand. Do not use tools to tighten clamp, it may damage the peeler and will void your warranty. See illustrations below for proper mounting example.

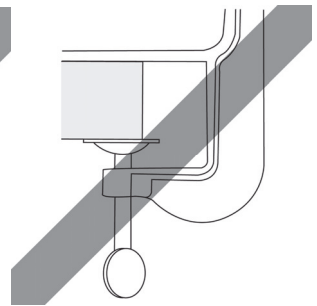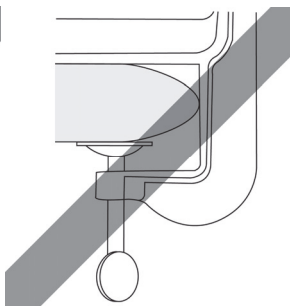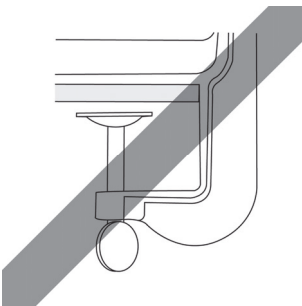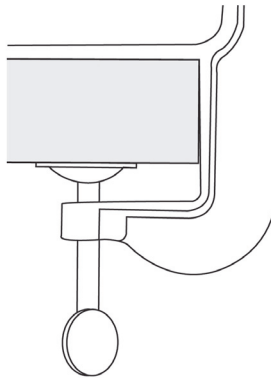


Align, adjust and secure blades:

Before using the peeler it is critical that the blades are properly aligned, adjusted and secured. Misaligned or unsecured blades **will** damage the peeler.


Align the coring blade:

Align the coring/slicing blade. The fork should be able to pass through the center of the blade without touching the sides. The correct alignment is shown to the right. The blade **MUST** be tightened firmly so it will not move out of alignment during operation. * Use caution when adjusting, blade is sharp!

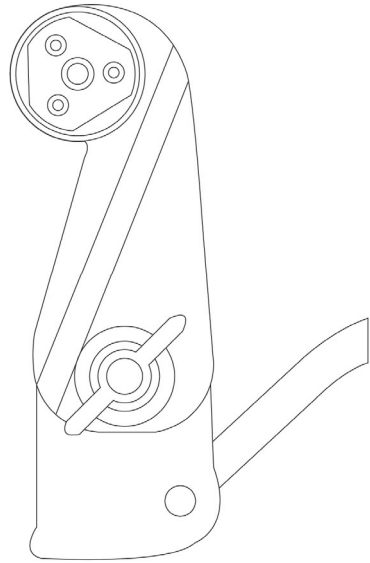


Test alignment:

Test blade alignment by pressing down on the release lever. While holding the release lever down move the shaft forwards and backwards and watch the fork as it is passing through the center of the coring blade. Observe carefully to make sure the fork doesn't touch the sides of the coring blade.

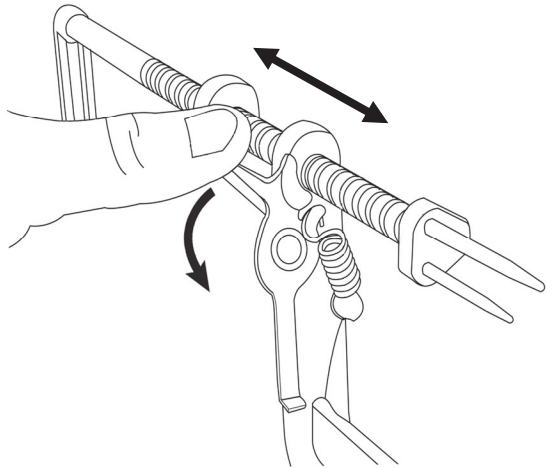


Adjust peeling blade:

The peeling blade works best when adjusted to about 1/8 inch past the head of the peeling arm. To adjust the peeling blade, loosen the wing-nut 1/2 turn. The blade can be moved forwards to remove more peel or backwards to remove less peel. Firmly tighten the wing-nut after adjustment has been made. It may require a few tests and further blade adjustments before you get the desired result. *** Use caution when adjusting, blade is sharp!**

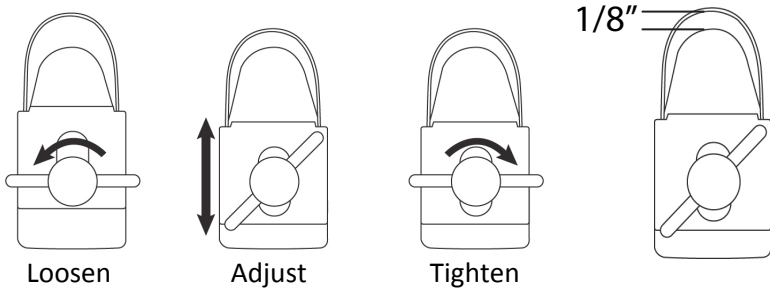


Adjust peeling arm:

The peeling arm has been factory adjusted to have approximately 1/4 inch clearance between the peeling blade and the widest part of the fork.. To adjust the position of the peeling arm, either tighten or loosen the adjustable screw to achieve proper spacing. Turn the screw clockwise to adjust it away from the fork. Turn the screw counter-clockwise to adjust it closer to the fork.

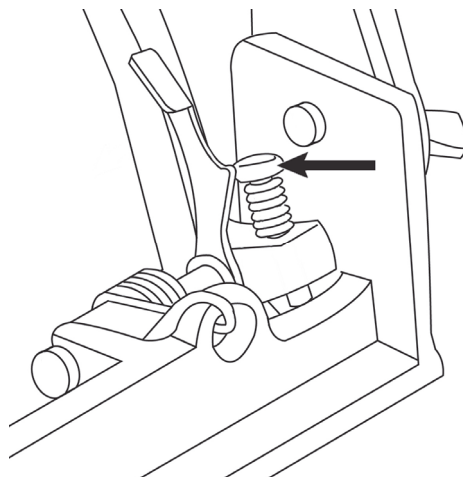

Place apple on fork:

- Press the release lever as shown in the illustration on bottom of page 3 and while holding down the lever pull the spiral shaft away from the coring blade until the fork is as far away from the coring blade as possible.
- Place apple on fork (stem end first) and center the apple on the fork as well as possible. Make sure the apple is pressed firmly onto the fork.
- Turn the handle clockwise a few turns to make sure the apple is centered on the fork properly. Adjust if necessary.
- The illustration below shows how it should look when you are ready to begin peeling.

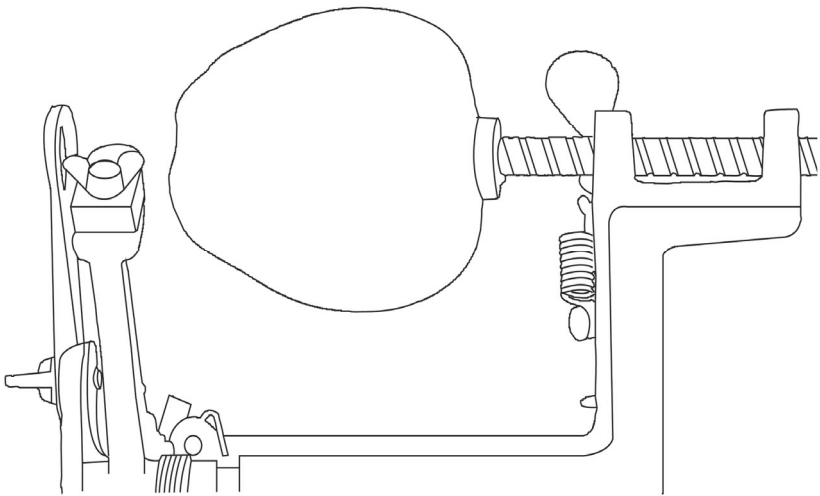

To Peel, Slice and Core

- To peel turn the handle slowly clockwise to advance the apple into the blades. The peeling blade will automatically adjust to the contour of the apple as it advances forward.
- To remove the core, push in the shaft lever and pull back on the handle. Core will be ejected by the coring/slicing blade.
- When peeling is finished carefully remove the core from the fork. Press the release lever and pull the shaft away from the coring blade and back to the starting position.

For Peeling Only


Peeling apples and potatoes is quick and easy with the Victorio Peeler – no more scraping your hand with a potato peeler.

- Loosen the wing nut at the end of the Victorio Peeler. This will allow you to disengage the coring slicing blade. Either move the coring slicing blade to the side, out of the path of the shaft, or remove the blade completely

For Slicing and Coring without Peeling

For those occasions when the peelings are left on the fruit for flavor, texture, or color:

- Pull the peeling arm downward and engage the lock lever. The lever will keep the peeling blade clear of the fruit.

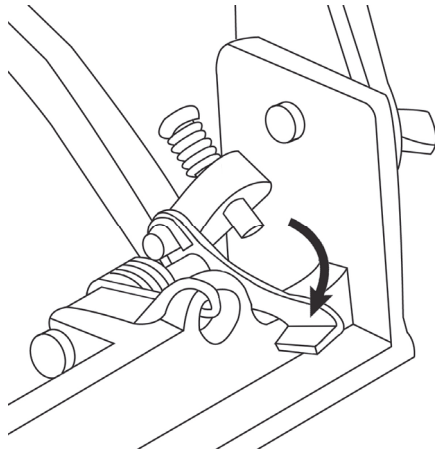

Tips and tricks

- Apples and potatoes that are firm, blemish free, and symmetrically shaped work best.
- For best results use only small to medium sized apples. Very large apples may have undesirable results.
- When peeling potatoes US Grade #1 will give you the best results.
- Avoid using soft fruit. Soft fruit will have problems peeling and staying in place on the fork.

Making Shoestring Potatoes

The first step to restaurant-style hash browns is cutting them to shoestring thickness. No more scrubbing potatoes and knuckles across the graters The Victorio Peeler makes cutting shoestring potatoes almost effortless.

1. Remove the coring/slicing blade from the path of the shaft.
2. Adjust the peeling blade as far toward the potato as possible so that it cuts deep into the potato.
3. Turn handle and peel the potato with the deep cut.
4. When the full length of the potato has been peeled, lock back the peeling arm, pull back the peeling shaft, and then release the peeling arm.
5. Repeat steps 3 and 4 until the peeling blade will no longer clear the 3-prong fork.

Cleaning and care:

- When cleaning the entire unit hand washing is recommended.
- After washing dry thoroughly.
- Peeling and coring/slicing blade can be washed in a dishwasher.
- A drop of vegetable oil on the moving parts will insure smooth operation for next use.

Additional Support

See our website **VictorioKitchenProducts.com** for replacement parts, instructional videos and other helpful information.

Notes:

TROUBLESHOOTING GUIDE

PROBLEM	SOLUTION
Peeler is taking off too much peel	Adjust the peeling blade to remove less peel. See page 4 for instructions
Peeling blade is digging in when first starting to peel	Peeling arm and/or peeling blade needs to be adjusted. See page 4 for instructions
Apples do not stay in place on fork when peeling	Check fork to make sure it is not damaged. Use only fresh firm fruit and make sure it is pressed completely on the fork.
Does not peel all sides evenly	Apple or Potato is not centered on fork or is not symmetrical. Use firm symmetrically shaped apples and potatoes.
Fork won't pass through center of coring blade.	Coring blade is out of alignment or has been damaged (bent or out of round). See page 3 for alignment instructions. If damaged contact customer service.
Part of the peeler is missing or damaged.	Do not use and contact customer service.

Product Warranty

Victorio Kitchen Products warrants this appliance from defects or failures in the material and workmanship for five (5) years from the date of original purchase.

All warranty claims must be accompanied by a proof of purchase and are only valid if the appliance has been operated and maintained in conformity with the provided instruction manual.

Any failed part of the appliance will be repaired or replaced without charge at Victorio Kitchen Products' discretion. This warranty applies to household use only.

This warranty is null and void, as determined solely by Victorio Kitchen Products if the appliance is damaged through accident, misuse, abuse, negligence or if the appliance is altered in any way.

THIS WARRANTY IS IN LIEU OF IMPLIED WARRANTIES, INCLUDING WARRANTIES OF MERCHANTABILITY, FITNESS FOR PARTICULAR PURPOSE, PERFORMANCE, OR OTHERWISE, WHICH ARE HEREBY EXCLUDED. IN NO EVENT SHALL VICTORIO KITCHEN PRODUCTS BE LIABLE FOR ANY DAMAGES, WHETHER DIRECT, INDIRECT, INCIDENTAL, FORESEEABLE, CONSEQUENTIAL OR SPECIAL ARISING OUT OF OR IN CONNECTION WITH THIS APPLIANCE.

If you think this appliance has failed or requires service within its warranty period please contact:

Victorio Kitchen Products Customer Service Department

www.VictorioKitchenProducts.com

Call 866-257-4741

or

E-mail Service@VictorioKitchenProducts.com

Return shipping fees are non-refundable. A receipt proving original purchase date will be required for all warranty claims. Handwritten receipts are not accepted. Victorio Kitchen Products is not responsible for returns lost in transit.